

ADB | Polaris Remote

Below is an explanation of how each button on the Polaris remote responds, depending on if you are in the guide, watching a program, or in your recordings.

GUIDE: opens record menu
PROGRAM: opens record menu
RECORDINGS: deletes recording

**This button does nothing, regardless of what view you are in.*

Powers on/off STB, regardless of what view you are in.

GUIDE: stops recording, if you are
PROGRAM: stops recording, if you are
RECORDINGS: deletes recording

GUIDE: see programming of past
PROGRAM: (nothing)
RECORDINGS: pages back to folder

GUIDE: (nothing)
PROGRAM: unpauses, if paused
RECORDINGS: plays recording

GUIDE: see past programming, up to 2 hrs
PROGRAM: (nothing)
RECORDINGS: (nothing)

GUIDE: pages to future programming
PROGRAM: fast forwards, if you are behind live time
RECORDINGS: pages forward

GUIDE: opens list of recordings
PROGRAM: opens list of recordings
RECORDINGS: cycles through menus

GUIDE: closes guide
PROGRAM: (nothing)
RECORDINGS: (nothing)

Opens main menu, regardless of what view you are in.

Opens expanded info, regardless of what view you are in.

GUIDE: arrow left
PROGRAM: opens search
RECORDINGS: page back

GUIDE: select channel
PROGRAM: expanded info
RECORDINGS: expanded info

GUIDE: arrows up
PROGRAM: channel info for channel above in list
RECORDINGS: arrows up

GUIDE: cycles through guide, press twice it opens the smaller guide, if you press 3 times, it closes guide
PROGRAM: opens guide
RECORDINGS: opens guide

GUIDE: arrows right
PROGRAM: shows now playing
RECORDINGS: sets recording?

GUIDE: exit
PROGRAM: closes menu
RECORDINGS: exit

GUIDE: arrow down
PROGRAM: shows info for channel below in list
RECORDINGS: arrow down

GUIDE: closes guide
PROGRAM: go to last viewed channel
RECORDINGS: parent up?

GUIDE: search
PROGRAM: opens Apps menu
RECORDINGS: search

**This button does nothing, regardless of what view you are in.*

**This button does nothing, regardless of what view you are in.*

GUIDE: forward/back a day
PROGRAM: (nothing)
RECORDINGS: (nothing)

GUIDE: up/down a page
PROGRAM: (nothing)
RECORDINGS: takes you to the top/bottom of the page of recordings

**This button does nothing, regardless of what view you are in.*

Opens VOD, regardless of what view you are in.

AcenTek
 www.AcenTek.net